





Russell Hobbs



instructions

£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery
www.productregister.co.uk/rhobbs
Register online now!
See back for details

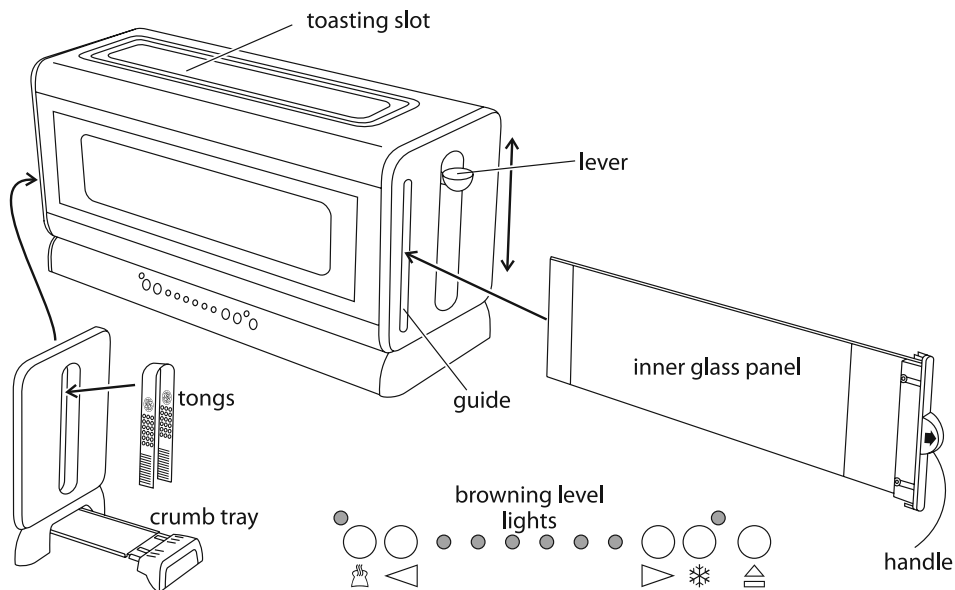

 Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.

 **IMPORTANT SAFEGUARDS**


Follow basic safety precautions, including:

1 This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved.

- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Keep the appliance and cable out of reach of children under 8 years.

 The surfaces of the appliance will get hot.

- 1 This appliance must not be operated by an external timer or remote control system.
- 2 Bread may burn. Don't use the appliance near or below curtains or other combustible materials and watch it while it's hot.
- 3 Remove and empty the crumb tray.
- 4 Wipe with a damp cloth, dry, then replace it in the toaster.
- 5 If the cable is damaged, return the appliance, to avoid hazard.


-  Don't immerse the appliance in liquid.
- 6 Don't toast or reheat "battered", torn, or misshapen bread.
- 7 If bread gets jammed, unplug the toaster, let it cool, and carefully remove the bread.
- 8 Don't use the appliance for any purpose other than those described in these instructions.
- 9 Don't operate the appliance if it's damaged or malfunctions.

household use only




BEFORE USING FOR THE FIRST TIME

- Set the browning level to maximum. Operate the appliance empty, to cure the new elements. This may smell a bit, but it's nothing to worry about. Ensure the room is well ventilated.


SLEEP MODE

- If you don't touch the controls for 5 minutes, the lights will go out, to save electricity.
- To wake the appliance, press the  button.

TOASTING BREAD

- 1 Sit the toaster upright on a firm, level, heat-resistant surface.
- 2 Put the plug into the power socket.
- 3 The appliance will first run through a self-check routine.
- 4 4 browning level lights will stay on.
- 5 Use the buttons at either end of the browning level lights to lighten  or darken  the toast.
- 6 The more lights showing, the darker the toast.
- 7 Put bread into the toasting slots (maximum thickness 31mm).
- 8 Press the lever down fully.
-  It won't lock down unless the toaster is connected to the electricity supply.
- 9 The browning level lights will count down:
- 10 When it's done, the toast will pop up.



EJECT

- 11 To stop toasting, press the  button.



TONGS

- 12 Unplug the toaster before using the tongs.
- 13 Insert the tongs vertically, to avoid damaging the elements.
- 14 Use the tongs only to extract small items from the toasting slots of your Russell Hobbs toaster.

FROZEN BREAD

- 15 Leave the browning control at your favoured setting, insert the frozen bread, lower the lever, then press the  button.
- 16 The  light will come on, and the toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.

REHEATING TOAST

- 17 Leave the browning control at your favoured setting, insert the bread, lower the lever, then press the  button.
- 18 The  light will come on, and the toast will be given a short burst of heat.

19 Only reheat plain, “unbuttered” toast.

CARE AND MAINTENANCE

20 Unplug the toaster and let it cool down.

21 Grip the handle on the side of the inner glass panel, and slide it out of the guide.

22 Wipe all surfaces with a clean damp cloth.

23 You may wash the inner glass panel in the top rack of a dishwasher.

24 When you replace the inner glass panel, the arrow ➡ must face the front.

25 Slide the inner glass panel fully into the guide.

26 The appliance will not work unless the inner glass panel is fully inserted.

27 Only the handle ➡ should protrude.

28 You may wash the tongs in the cutlery basket of a dishwasher.

29 Replace them in the space in the left side of the appliance.

30 If you use a dishwasher, the harsh environment inside the dishwasher will affect the surface finishes.

31 The damage should be cosmetic only, and should not affect the operation of the appliance.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: support@russellhobbs.com

telephone: 0845 658 9700 (local rate number)



GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.



ONLINE/SPARES


www.russellhobbs.co.uk for more products and/or spares



REGISTER ONLINE FOR –

 £10,000 prize draw,

 EXTRA year guarantee,

 FREE rewards gallery

Visit www.russellhobbs.co.uk/productregister

You must register within 28 days of purchase.