



 
 
 
 
 
Russell Hobbs



instructions

£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery

www.productregister.co.uk/rhobbs
Register online now!
See back for details

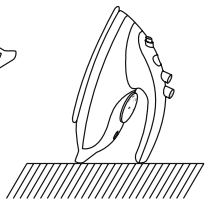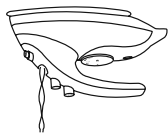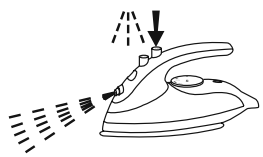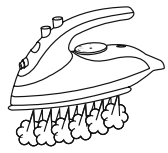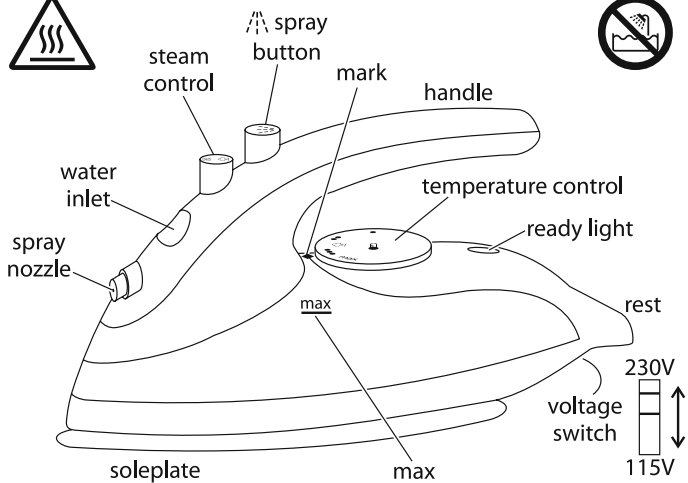


Read the instructions, keep them safe, pass them on if you pass the iron on.



IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Use and store the appliance out of reach of children under 8 years.
 - 2 This iron is designed for occasional use, not regular everyday use.
 - 3 Use the iron, or set it on its heel, on a stable, level, heat-resistant surface.
 - 4 Don't leave the iron unattended while plugged in, or while it's standing on the ironing board.
 - 5 Unplug the iron before filling, before cleaning, and after use.
 - 6 Don't operate the appliance if it's dropped or damaged, or if it malfunctions or leaks.
-  The surfaces of the appliance will get hot.


7 If the cable is damaged, return the iron, to avoid hazard.

- ⊗ Don't put the appliance in liquid, and don't use it in a bathroom.
- 8 Don't iron clothing while it's being worn – you'll injure the wearer.
- 9 Don't use the appliance for any purpose other than those described in these instructions.
- 10 Don't scratch the soleplate – avoid buttons, zips, etc.
- 11 Don't wrap the cable round the appliance
- 12 The appliance has a protective thermal fuse, which will blow if it overheats. If this happens, the appliance will stop working, and must be returned for repair.

household use only



BEFORE USING FOR THE FIRST TIME

- Remove labels, stickers and packaging from the iron and soleplate.
- Don't worry if the iron smokes a bit at first, it'll stop as the element cures.
- Iron an old piece of cotton fabric, to clean the soleplate.
- Press the  button 3 or 4 times, to check it out.



CHECK THE VOLTAGE BEFORE USE

- 1 Check the local voltage.
- 2 The voltage switch is under the rear of the iron.
- 3 Set the voltage switch to 115V for a local voltage of 100-120 volts a.c., set it to 230V for a local voltage of 220-240 volts a.c.
- 4 Using the wrong setting will probably damage the iron beyond repair.
- 5 On lower voltages, the iron may take longer to heat up.



TRAVEL ADAPTOR

- 6 Use an earthed travel adaptor suitable for the wall sockets in the area you're visiting.










FILLING

- 7 Turn the temperature control to ●, and unplug the iron.
- 8 The iron is tap-water tolerant, so you may fill the reservoir with tap-water, but if you're in a hard-water area, you should use distilled water.

- 9 If you buy distilled water, check it's marketed as suitable for irons.
- 10 Don't use chemically descaled water, or water from a water softening installation, and don't put anything in the water.
- 11 Pour water into the water inlet.
- 12 Pour slowly, and try to pour down one side of the inlet, to allow the air in the reservoir to escape, otherwise you'll cause an air lock and the water will overflow.
- 13 Don't fill past the **max** mark on the reservoir.
- 14 Wipe up any spillage.





PREPARATION



- 15 Check for textile care symbols (   ).
- 16 Iron fabrics needing low temperatures  first, then those that need medium temperatures , and finish with those needing high temperatures  (or max).

POWER UP


 
- 17 Set the iron upright, with the rests at either side of the rear of the iron, and the end of the handle, on a stable, level, heat-resistant surface, preferably an ironing board
- 18 Put the plug into the wall socket (switch the socket on).

TEMPERATURE SETTING GUIDE


label marking	temperature
dot setting	
 cool – nylon, acrylics, polyester	•
 warm – wool, polyester mixtures	••
 hot – cotton, linen	•••/max
 do not iron	

- ★ If the instructions on the fabric label differ from this guide, follow the instructions on the label.
- 19 Turn the temperature control to bring the setting you want next to the  mark.
 - ★ If you want to use steam, you must set the temperature to  or higher, or you'll just get water.
 - 20 The ready light will glow, to tell you the iron is heating up, then it'll go on and off as the thermostat operates to maintain the temperature.


STEAM IRONING

- 21 Check there's water in the reservoir.
- 22 Set the temperature control to  or higher, or you'll get water, not steam.
- 23 Wait till the ready light goes out, then turn the steam control to .
- 24 Start ironing – steam will come from vents in the soleplate.


DRY IRONING

- 25 Turn the steam control to , to cut off the steam.
- ★ If you're going to be dry ironing for 20 minutes or more, empty the iron reservoir first, to avoid spontaneous bursts of steam.

SPRAY

- ★ Water spotting affects some fabrics. Test this out on a hidden part of the fabric.
- 26 Lift the iron off the fabric.
- 27 Aim the spray nozzle at the fabric.
- 28 Press the  button.
- 29 You may have to press it 2 or 3 times to pump water through the system.

AFTER USE

- 30 Turn the temperature control to ●.
- 31 Turn the steam control to .
- 32 Unplug the iron from the wall socket (switch the socket off first, if it's switchable).
- 33 Sit it upright, and leave it to cool down completely.
- 34 When it's cool, turn the iron upside down over a sink or basin, and empty the reservoir.
- 35 Wipe off any excess moisture.


CARE AND MAINTENANCE

- 36 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.
- 37 Remove spots from the soleplate with a little vinegar.
- 38 Take care not to scratch the soleplate.
- 39 Don't put the appliance in water or any other liquid.
- 40 Don't use harsh or abrasive cleaning agents or solvents.

DESCALING

As you may be using the iron in areas where you don't know whether the water is soft or hard, we suggest that you carry out this procedure fortnightly, or at the end of each trip, if the trips are shorter than a fortnight. It only takes a few minutes.

42 Half fill the reservoir with water.

43 Turn the steam control to , turn the temperature control to max.


44 Plug the iron into the power socket, and wait for the ready light to go out.


45 When the ready light goes out, unplug the iron.

46 Hold the iron over a sink with the soleplate facing down, into the sink.

47 Turn the steam control to .

48 Hot water, steam, and any built up scale will issue from the soleplate, into the sink.

49 Turn the steam control to , plug the iron in again, and wait till the ready light goes out.

50 Turn the steam control to , and steam iron an old scrap of cloth, to clear out any remaining scale.

51 When you've done, let the iron cool, then empty it, clean it, and pack it away.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



CUSTOMER SERVICE

If you ring, have the Model No. to hand, as we won't be able to help without it. It's on the rating plate (usually underneath the product). The product isn't user-serviceable. If it isn't working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem, ring Customer Service for advice. If they tell you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Ltd, Fir Street, Failsworth, Manchester M35 0HS

email: support@russellhobbs.com

telephone: 0845 658 9700 (local rate number)

➡ GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.



ONLINE

www.russellhobbs.co.uk for more products



REGISTER ONLINE FOR –



£10,000 prize draw,

EXTRA year guarantee,

FREE rewards gallery

Visit www.productregister.co.uk/rhobbs

You must register within 28 days of purchase.