




Russell Hobbs



instructions

£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery

www.russellhobbs.com/productregister/
Register online now!
See back for details

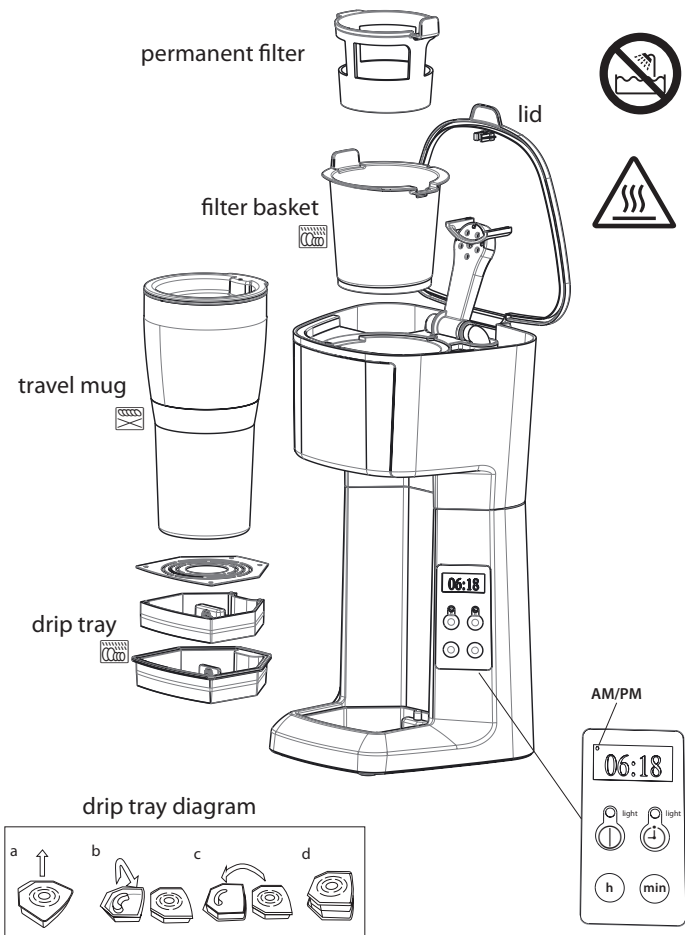



household use only

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.




IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved.
 - Children shall not play with the appliance.
 - Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
 - Keep the appliance and cable out of reach of children under 8.
-  The surfaces of the appliance will get hot.
-  Don't immerse the appliance in liquid.
- 2 If the cable is damaged, return the appliance, to avoid hazard.
 - 3 Sit the appliance on a stable, level, heat-resistant surface.
 - 4 Keep the appliance and cable away from the edges of worktops.
 - 5 Don't use accessories or attachments other than those we supply.
 - 6 Don't use the appliance for any purpose other than those described in these instructions.
 - 7 Don't use the appliance if it's damaged or malfunctions.

BEFORE USING FOR THE FIRST TIME

- 1 Sit the appliance on a stable, level, heat-resistant surface.
- 2 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 3 Lift cover.
- 4 Fill the reservoir to the max mark and run the appliance without coffee.
- 5 Put the plug into the power socket (switch the socket on, if it's switchable).
- 6 Press the  button.
- 7 The coffeemaker will start and switch off automatically when finished.
- 8 Let it cool, discard the water, then use it normally.

FILLING


- 9 Lift cover.
- 10 Pour fresh cold water up to MAX level mark into the reservoir using the travel mug ,for your regular mug fill to its maximum pour into the reservoir, do not pass the MAX level.
- 11 If desired, add sweetener, cream or milk to your travel mug or regular mug. Place the mug on the adjustable mug tray.
- 12 Place the permanent filter into coffee maker.
- 13 We recommend ground coffee (approximately 3 tablespoons).
 - If using ground coffee: For a regular mug (235ml), place approximately 1 ½ tablespoons into the filter basket. For a travel mug (470 ml), use approximately 3 tablespoons.
 - If using soft pods: This unit accepts 70mm soft pods. For a regular mug (235 ml), place one soft pod into the filter basket between filter and basket. For a travel mug (470ml), place an additional soft pod in the permanent filter.
- ★ personal preference will be trial and error.
- 14 Close the cover.
- 15 Place the travel mug under the coffee maker ensuring the latch on the lid is in the open position.

SWITCH ON

16 Put the plug into the power socket (switch the socket on, if it's switchable).

COFFEE NOW

17 Ignore the clock.

18 Press the  switch; the power indicator light illuminates. The coffeemaker and power indicator light turn off automatically when brewing is finished. Allow coffee to finish dripping from the unit before removing your travel mug.

★ Do not remove your mug while coffee is brewing.

★ To use a regular mug follow the drip tray diagram to increase the the drip tray height and follow step 18.

COFFEE LATER


19 The clock will retain its settings until the coffee maker is unplugged.


20 It's a 12 hour clock.



21 When plugged in the time will flash, set the clock to the correct time.

- Use the **h** and **min** buttons to set the correct hour and minute.
- The blue dot in the top left hand corner of the display indicates P.M to select A.M. ensure the blue light is not illuminated.

22 Set the timer to the time you want to start brewing.

- Press and hold for 3 seconds then release the  button the light above will start flashing.
- Use the **h** and **min** buttons to set the correct hour and minute.

23 Once the desired auto brew time is displayed press the  button again the light above the button stops flashing and stays illuminated. This indicates the time is set.

24 You can cancel the timer by pressing the  button or if you want coffee now by pressing the  button.

25 To adjust the programmed time after it has been set, follow steps 22 & 23

★ Your coffeemaker can also be used to brew hot water for tea, hot chocolate.

ADJUSTING THE MUG TRAY

The mug tray can accommodate the travel mug in the nested position (a) or a regular mug in the stacked position (d). Adjust the mug tray to the position that best accommodates your mug and ensure the mug tray is securely in place before brewing.

GROUND COFFEE

If you want to buy ready-ground coffee, medium-ground filter coffee will give you the best results. The amount will vary with the type of coffee and your individual taste.

STORING COFFEE

Coffee is best kept in an airtight container in a cool dry place, or in the fridge. Exposure to air oxidises coffee and allows the flavour to evaporate.

BOTTLED WATER

If you use bottled water, check that there are no added ingredients, flavourings, etc., and use “still” water, not “sparkling”. The carbon dioxide which gives the “sparkle” will adversely affect the flavour of your coffee.

MILK

If you like milk in your coffee, use warm or hot milk, to avoid overcooling the coffee. To extract maximum flavour from the coffee, it should be cool enough not to scald or burn the mouth, but hot enough to let the flavour fill the mouth, nose and sinuses, not just the taste buds.

TASTE

Don't be tempted to reheat coffee in the appliance. You'll damage the appliance and the coffee will be undrinkable. Clean the filter holder and carafe after each use. Residue from a previous brew will spoil your coffee.

NOTES


- ★ The time will need to be reset if the unit is unplugged or power is interrupted.
- ★ Be careful when opening the cover after brewing as this area is hot and steamy. Use the lift tab located on the front of the cover.
- ★ Products returned under guarantee with faults due to scale will be subject to a repair charge.

CARE AND MAINTENANCE


- 1 Unplug the appliance and let it cool down before cleaning or storing away.
- 2 Use the grip to open the lid.
- 3 Lift out the filter.
- 4 Tip the contents of the filter into the bin. Don't flush coffee grounds down the sink. They'll build up and cause a blockage.
- 5 Lift out the filter holder.
- 6 You may clean the travel mug, permanent filter and filter holder in warm soapy water. Rinse thoroughly afterwards, to remove all traces of soap.
- 7 Clean the outside surfaces of the appliance with a damp cloth.
- 8 Replace the filter holder.
- 9 Drop the filter into the filter holder.
- 10 Close the lid.

 You may wash these parts in a dishwasher.

 You may wash these parts in the top rack of a dishwasher.

 **Russell Hobbs** descaler, specially formulated to work with our products, is available online (back page).

ENVIRONMENTAL PROTECTION

 To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: support@russellhobbs.com

telephone: 0845 658 9700 (local rate number)

GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

ONLINE/SPARES

www.russellhobbs.co.uk for more products and/or spares

REGISTER ONLINE FOR –

 £10,000 prize draw,

EXTRA year guarantee,

FREE rewards gallery

Visit www.productregister.co.uk/rhobbs

You must register within 28 days of purchase.