





Russell Hobbs



instructions

£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery
www.productregister.co.uk/rhobbs
Register online now!
See back for details

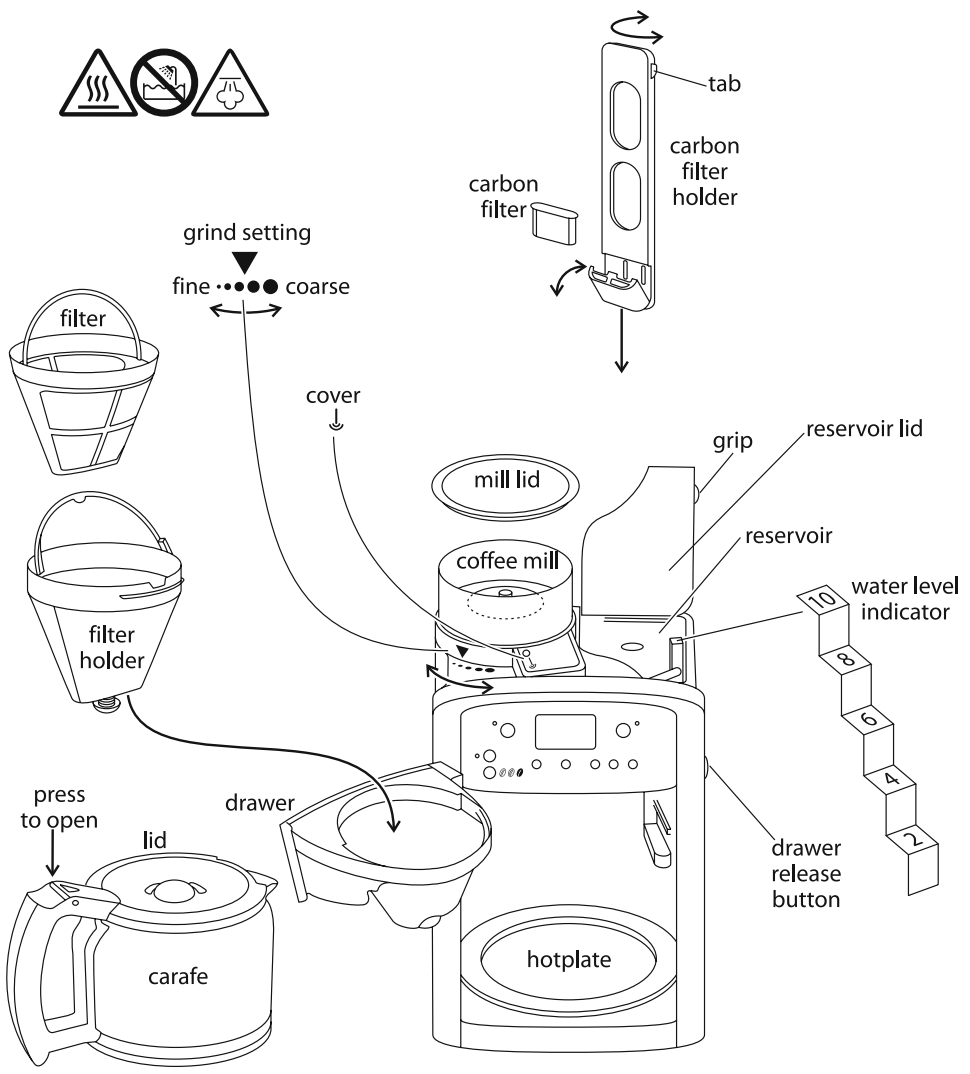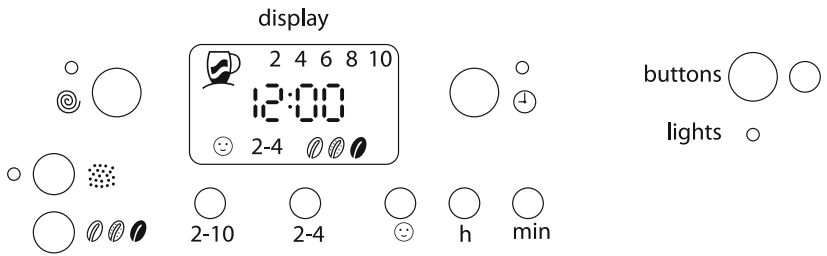



Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.



IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved.
 - Children must not use or play with the appliance.
 - Keep the appliance and cable out of reach of children.
-  Don't immerse the appliance in liquid.
-  The surfaces of the appliance will get hot.
- 2 Unplug the appliance before assembly, disassembly, or cleaning.
- 3 Don't leave the appliance unattended while plugged in.
- 4 If the cable is damaged, return the appliance, to avoid hazard.
- 5 Sit the appliance on a stable, level, heat-resistant surface.
- 6 Keep the appliance and cable away from the edges of worktops.
- 7 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 8 Fill with at least 2 cups of water, but not above the 10 mark.
- 9 There's a hole in the rear wall of the reservoir, to prevent overflowing.
- 10 Put the carafe on the hotplate before switching the coffee maker on.
- 11 Let the coffee maker cool for about 10 minutes before adding water or re-using, to avoid spitting.
- 12 Don't put the carafe in a microwave oven.
- 13 Don't try to adjust the metal band round the carafe, you'll break the glass.
- 14 Don't use accessories or attachments other than those we supply.
- 15 Don't use the coffee maker for any purpose other than those described in these instructions.
- 16 Don't use the coffee maker if it's damaged or malfunctions.

household use only



BEFORE USING FOR THE FIRST TIME

- 1 Fill the reservoir to the 10 mark, and run the coffee maker without coffee.
- 2 Let it cool, discard the water, then use it normally.
- 3 Turn to **"the carbon filter"** on page 6, and fit the carbon filter before using the coffee maker.



GROUND COFFEE

- 4 If you want to buy ready-ground coffee, medium-ground filter coffee will give you the best results. The amount will vary with the type of coffee and your individual taste. We suggest starting with two rounded teaspoons of medium-ground coffee per cup.

STORING COFFEE

- 5 Coffee is best kept in an airtight container in a cool dry place, or in the fridge. Exposure to air oxidises coffee and allows the flavour to evaporate.

MILK

- 6 There's a great deal of contention on the subject of milk in coffee. Our view is that personal taste should rule, not convention. If you like milk in your coffee, use warm or hot milk, to avoid overcooling the coffee. To extract maximum flavour from the coffee, it should be cool enough not to scald or burn the mouth, but hot enough to let the flavour fill the mouth, nose and sinuses, not just the taste buds.

BOTTLED WATER

- 7 If you use bottled water, check that it doesn't contain flavourings, etc., and use still water, not sparkling. The carbon dioxide which gives the sparkle will affect the flavour of your coffee.

TASTE

- 8 Don't be tempted to reheat coffee in the coffee maker. You'll damage the coffee maker and the coffee will be undrinkable.
- 9 Clean the filter holder, filter, and carafe after each use. Residue from a previous brew will spoil your coffee.

PREPARATION

- 10 Sit the coffee maker on a stable, level, heat-resistant surface.
- 11 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 12 Don't plug it in yet.

FILLING

- 13 Remove the carafe from the hotplate.
- 14 Use the grip to open the lid, and expose the reservoir.
- 15 Use the carafe to fill the reservoir, to avoid overfilling.
- 16 Press the lever at the rear of the carafe lid, above the handle, to open the carafe lid.
- 17 Fill with at least 2 cups of water, but not above the 10 mark.
- 18 Close the reservoir lid.
- 19 Close the carafe lid.
- 20 Don't replace the carafe yet.
- 21 Press the drawer release button and open the drawer.
- 22 If you're using coffee beans, jump to point 26.

GROUND COFFEE

- 23 Put filter-ground coffee into the filter. The amount will vary with the type of coffee and individual taste, but we suggest two rounded teaspoons per cup of water.
- 24 Close the drawer, then replace the carafe on the hotplate.
- 25 Jump to point 31.

COFFEE BEANS

- 26 Remove the lid from the coffee mill.
- 27 Fill the mill with coffee beans.
- 28 Replace the lid.
- 29 Turn the mill till the ▼ is next to the setting you require – fine ●●●●● coarse.

30 Close the drawer, then replace the carafe on the hotplate.

SWITCH ON

31 Put the plug into the power socket.

COFFEE NOW

32 Ignore the clock.



33 Use the    button to select the coffee strength  = light,  = medium,  = dark.

34 If you're using coffee beans, use the 2-10 button to set the number of cups you want.

This determines the length of time the mill operates.

35 If you're making less than 6 cups of coffee, press the 2-4 button, to turn the brew strength feature on. 2-4 will appear on the display (see "brew strength 2-4").

36 The brew strength feature will only work if the number of cups is set to 2 or 4.

37 Press the  button if you're using coffee beans, press the  button if you're using ground coffee.

38 The light next to the button will come on.

39 If you're using coffee beans, the mill will operate.

40 Shortly afterwards, coffee will start to drip into the carafe.

41 When it's done, the hotplate will keep the carafe warm for 40 minutes.

42 After about half an hour, chemical changes start to affect the flavour.



AUTO SHUT-OFF


43 About 40 minutes after brewing finishes, the appliance will revert to standby.

44 To wake the appliance, press any button.

45 Unplug, and let the coffee maker and carafe cool down fully before cleaning, or for about 10 minutes before refilling.

46 To switch off manually:

- a) Press the  button if you're using beans.
- b) Press the  button if you're using ground coffee.
- c) The light next to the button will go out.

 Don't lift the reservoir lid till the coffee maker has cooled – escaping steam may create a scald hazard.

A QUICK CUP

47 If you want a quick cup of coffee before the brewing cycle has finished:

48 You may remove the carafe at any time. The non-drip valve will prevent coffee dripping on to the hotplate.

49 To prevent the filter holder overflowing, replace the carafe on the hotplate within about 20 seconds. This may not sound much, but you'll find it's more than enough time to pour a couple of cups of coffee.

50 Replacing the carafe on the hotplate opens the non-drip valve, to let the coffee flow again.

BREW STRENGTH 2-4

51 Use this feature if you're brewing less than 6 cups of coffee. It slows the brewing process, so your coffee will have the same strength as coffee from a full carafe.

52 The brew strength feature will only work if the number of cups is set to 2 or 4.










53 Press the 2-4 button to activate the brew strength feature, the 2-4 icon will show up on the display.

COFFEE LATER

54 Set the clock to the correct time:

- Press and release the **h** button until the correct hour is shown.
- Press and release the **min** button until the correct minute is shown.
- It's a 24 hour clock.
- If you overshoot, you can't step back. Either go right round (24 hours or 60 minutes), or unplug the coffee maker, to reset the display to 12:00.
- The clock will retain its settings until the coffee maker is unplugged. It will reset to 12:00 next time you plug it in.

55 Set the timer to the time you want to start brewing.

- Press the  button and hold it for 3 seconds.
 - The  light will flash.
 - Release the  button.
 - Press and release the **h** button until the correct hour is shown.
 - Press and release the **min** button until the correct minute is shown.
 - Use the  button to select the coffee strength  = light,  = medium,  = dark.
 - If you're using coffee beans, use the 2-10 button to set the number of cups you want.
 - If you're making less than 6 cups of coffee, press the 2-4 button, to turn the brew strength feature on.
 - The brew strength feature will only work if the number of cups is set to 2 or 4.
 - If you're using ground coffee, press and release the  button, otherwise the machine will assume you're using beans.
 - If you don't press all the buttons within 10 seconds, the coffee maker will revert to "normal", and the time will show.
 - You'll have to press the  button, and start again.
- ★ You have now set the timer to the time you want to start brewing, and you have set the clock to the correct time. You have not turned the timer function on.

TURN THE TIMER ON

56 Press and release the  button.

57 The  light will stop flashing, and glow steadily.

LEAVE IT ALONE

58 That's it – leave it alone till the preset time comes round, and it makes your coffee – don't fiddle with it, you might upset it.

59 The clock will retain its settings until the coffee maker is unplugged.

60 If you want to cancel the timer before brewing has started, press the  button.

THE CARBON FILTER

61 Chemicals in the water may affect the flavour of your coffee. The carbon filter will remove or reduce the amount of these chemicals.

62 Open the reservoir lid.

63 Grip the top of the carbon filter holder and pull it up and out of the reservoir.

64 Pull open the bottom of the carbon filter holder.

65 Remove the old carbon filter and put it in the bin.

- 66 Fit a fresh carbon filter into the bottom of the filter holder, and close it.
- 67 Turn the carbon filter holder till the tab is towards the coffee mill, lower it into the reservoir, and push the bottom of the filter holder into the matching space in the floor of the reservoir.
- 68 Close the reservoir lid.
- 69 The carbon filter will last for 70 brewing cycles.
- 70 If you leave the coffee maker plugged in, it will count these for you, and show ☺ in the display when it needs replacing.
- 71 When you've replaced the filter, press and release the ☺ button, to remove ☺ from the display.
- 72 Don't worry if you don't have a replacement carbon filter handy. The coffee machine will work without it.

REPLACEMENT CARBON FILTERS

- 73 Replacement carbon filters (ask for part number 197780) are available from Customer Service. Ring 0845 658 9700, or email support@russellhobbs.com for prices, then purchase using VISA or MASTERCARD.

CARE AND MAINTENANCE

- 1 Unplug the coffee maker and let it cool down before cleaning or storing away.
- 2 Tip the contents of the filter into the bin – don't flush coffee grounds down the sink. They'll build up and cause a blockage.
- 3 You may clean the carafe, filter, and filter holder in warm soapy water. Rinse thoroughly afterwards, to remove all traces of soap.
- 4 Clean the outside surfaces of the coffee maker with a damp cloth.
- 5 Clean the inside of the coffee mill with a pastry brush.
- 6 Remove the cover in front of the coffee mill by pressing the hole marked ↓ with a cocktail stick, and sliding the cover forward.
- 7 Clean the inside with a pastry brush, then slide the cover back into place.
- 8 Don't put any part of the coffee maker in a dishwasher.
- 9 Don't put the coffee maker in water or any other liquid.
- 10 Don't use harsh or abrasive cleaning agents or solvents.

DESCALING

- 11 Scale build-up will cause the element to overheat, reducing its working life. It will also lengthen the brewing time.
- 12 Descale regularly. If you notice the brewing time getting longer, shorten the time between descalings. In areas of very hard water it may be necessary to descale as often as once a month, or to use filtered water instead of ordinary tap water.
- * Remove the carbon filter before descaling, replace it after rinsing.
- 13 Use a proprietary brand of descaler suitable for use in plastic-bodied products. Follow the instructions on the package of descaler. After descaling, run the coffee maker twice with fresh water, but without coffee, to rinse out any chemical residues.
- * Products returned under guarantee with faults due to scale will be subject to a repair charge.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: support@russellhobbs.com

telephone: 0845 658 9700 (local rate number)


GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

ONLINE/SPARES

www.russellhobbs.co.uk for more products and/or spares

REGISTER ONLINE FOR –

 £10,000 prize draw,
EXTRA year guarantee,
FREE rewards gallery

Visit www.productregister.co.uk/rhobbs

You must register within 28 days of purchase.