



Russell Hobbs



BAKE EXPERT MINI TOASTER OVEN

2 YEAR WARRANTY


RHTOV10

RHTOV10_IB&RB_FA_220916 Part No. T22-5003436

INSTRUCTIONS & WARRANTY

IMPORTANT SAFEGUARDS

When using this appliance, basic safety precautions should always be followed, including the following: Read all instructions before, and follow whilst using this appliance.

1. To protect against electrical hazards do not immerse the power cord, plug or toaster oven in water or any other liquid.
2. Do not use in the bathroom or near any source of water. 
3. Do not use outdoors.
4. Always use the appliance's handles or use oven gloves/mitts as some parts will be hot.
5. The temperature of accessible surfaces/parts may become very hot when the appliance is operating and may remain hot for some time after the appliance has been switched off.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Keep the oven and the power cord away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
8. This appliance is not a toy. Children should be supervised to ensure they do not play with the appliance.
9. Do not leave this appliance unattended when in use.
10. Always switch off and unplug from the power outlet when not in use.
11. Always switch off and unplug from the power outlet and allow the oven to cool before cleaning.
12. To disconnect, set controls to OFF. Switch off the wall power outlet, then grasp the plug and remove from wall power socket. Never pull by the cord.
13. Do not operate this appliance with a damaged cord/plug or after the appliance has malfunctioned, or been dropped or damaged in any manner. Contact Customer Service for replacement, examination, repair or adjustment.
14. There are no user serviceable parts. If power cord or appliance is damaged, it must be replaced by the manufacturer or similarly qualified person in order to avoid a hazard.
15. Do not use on an inclined plane or unstable surface.
16. Do not move the oven while it is switched on.
17. Do not cover the oven when in use.
18. Oven gloves should be used when removing food items.
19. Always take care when removing hot food items from the oven.
20. Food may burn. Always monitor when using this appliance.
21. Do not use the oven near or below any curtains or other combustible materials.
22. Do not cook food items too large for the oven.
23. Do not cook food wrapped in plastic film or polythene bags. It will cause a fire hazard.
24. Do not place on or near any heat sources.
25. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
26. Follow the instructions when cleaning this appliance.

27. Do not use appliance for anything other than its intended purpose.
28. Do not store any material, other than manufacturer's recommended accessories, in this oven when not in use.
29. Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
30. Clean the oven and crumb tray regularly. Failure to do so may cause a fire hazard.
31. Do not cover crumb tray or any part of this oven with metal foil. This will cause overheating of the oven.
32. This appliance is not intended to be operated by means of an external timer or separate remote control system.
33. For added safety, electrical appliances should be connected to a power outlet that is protected by a residual current device (RCD), also often referred to as a 'Safety Switch'. Your switchboard may already incorporate an RCD. If unsure, call an electrician for verification and fitting if necessary.
34. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels, and other residential type environments;
 - Bed & breakfast type environments.

SAVE THESE INSTRUCTIONS.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004 Braeside
Victoria 3195 Australia

Customer Service in Australia

TollFree: 1800 623 118
Email: info@spectrumbrands.com.au
Website: www.spectrumbrands.com.au

Spectrum Brands New Zealand Ltd

PO Box 9817 Newmarket
Auckland 1149 New Zealand

Customer Service in New Zealand

TollFree: 0800 736 776
Email: service@spectrumbrands.co.nz
Website: www.spectrumbrands.co.nz

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd Warranty Against Defects

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or **us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573;
or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for a **(Warranty Period)** period of 2 : **(Warranty Period)** of purchase.

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
 5. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
 6. The warranty granted under clause 3 is limited to repair or replacement only.
 7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
 8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
 9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
 10. The Goods are designed for domestic use only. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
 11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
 12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Ltd.
- Contact us or the Supplier for further details.

Register your product online

If you live in Australia please visit: www.spectrumbrands.com.au/warranty

If you live in New Zealand Please visit: www.spectrumbrands.co.nz/warranty

 
Registration of your warranty is not compulsory, it gives us a record of your purchase AND entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

Any questions? Please contact Customer Service for advice.

Congratulations on the purchase of your new Russell Hobbs appliance. Each unit is manufactured to ensure safety and reliability.

Before using the appliance for the first time, please read this instruction booklet carefully and keep it for future reference. Pass it on if you pass on the appliance.

When using this appliance, basic safety precautions should always be followed.

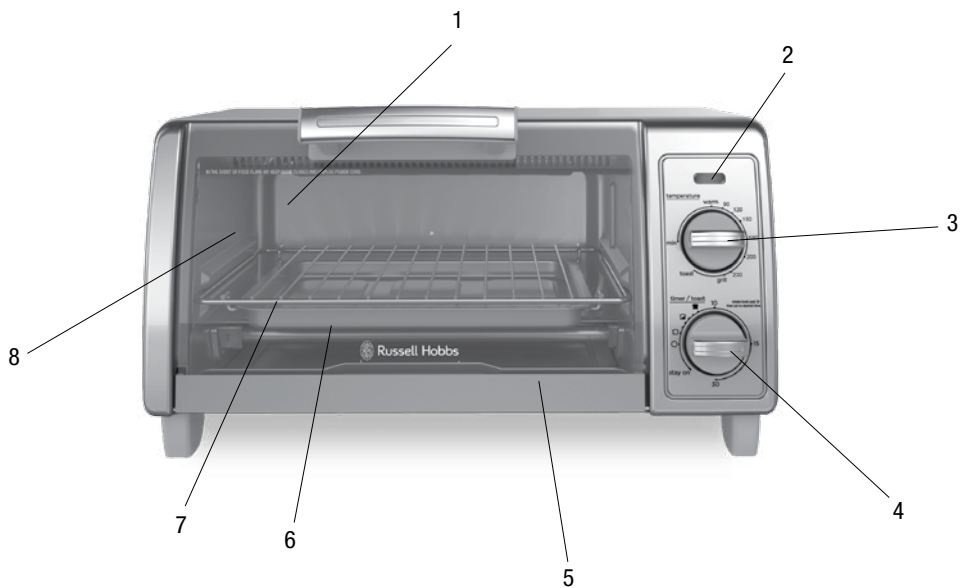

- | | |
|--|-------------------------------|
| 1. Easy-view glass door | 5. Slide out crumb tray |
| 2. Power indicator light | 6. Baking pan/drip tray |
| 3. Temperature knob | 7. Slide rack/grill rack |
| 4. Timer/toast knob with stay on setting | 8. Extra deep curved interior |

GETTING STARTED

- Remove all packing material, any stickers, and the plastic band around the power plug.
- Remove and save literature.
- Wash all removable parts as instructed in Care and Cleaning section.
- Select a location where this unit is to be used, allowing enough space from the back of the unit and wall to allow heat to flow without damage to cabinets and walls.
- Plug into outlet.

 
IMPORTANT INFORMATION ABOUT YOUR OVEN

1. This oven gets hot. When in use, always use oven mitts or potholders when touching any outer or inner surface of the oven.
2. When using the oven for the first time, you may notice smoke or a slight odor during the first few minutes. This is normal.
3. You must set the timer or select '**stay on**' for the oven to function.
4. Be sure food or baking dish does not come within 1 1/2 inches (4cm) of the top heating elements.
5. Food should not extend beyond the edges of the baking pan/drip tray to avoid drippings from falling onto the heating elements.
6. The heating elements will cycle on and off to maintain even heat distribution.

COOKING CONTAINERS

Metal, ovenproof glass or ceramic bakeware can be used in your oven. Follow the manufacturer's instructions. Be sure the top edge of the container is at least 1 1/2 inches (4cm) away from the upper heating elements.


ADVANCED COOKING TECHNOLOGIES

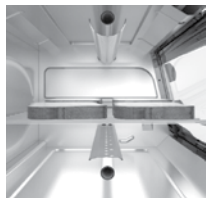

EVENTOAST TECHNOLOGY™

Delivers delicious and even toast.

 The Bake Expert Mini Oven evenly distributes heat and infrared energy throughout the oven cavity optimising even toasting.

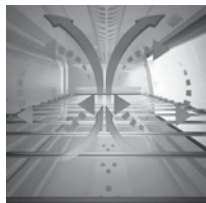


NATURAL CONVECTION

With improved airflow for more even cooking.

Natural Convection provides delicious cooking results. This Russell Hobbs unit was engineered to precisely manage air circulation based on the principles of thermodynamics.

OPERATING YOUR OVEN

 THERE ARE THREE WAYS TO TURN THE TOASTER OVEN ON:

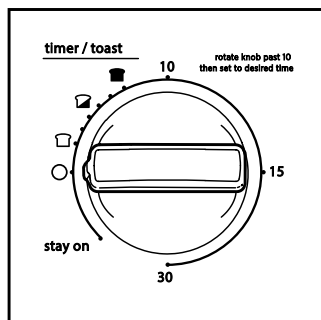

- Turn **'timer/toast'** knob to **'stay on'**.
 - Turn **'timer/toast'** knob past 10 and then back to desired toast shade.
 - Turn **'timer/toast'** knob past 10 and then to desired time.
- To turn OFF**, turn the **'timer/toast'** knob to the **O** position.

TOAST FUNCTION

It is not necessary to preheat the oven for toasting.

1. Set **'temperature'** knob to **'toast'** position.
2. Open oven door and insert slide rack.
3. Place items to be toasted directly on slide rack and close the door.
4. Turn **'timer/toast'** knob past 10 and then turn back to desired toast shade.
5. The power indicator light comes on and remains on until toasting cycle is complete.

NOTE: The toast markings are indicative only and results will vary. Always monitor the cooking process.

6. When toast cycle is complete, there will be an audible signal. The oven and the power indicator light will go off.
7. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast.
8. Unplug appliance when not in use.



For best results, place the bread in the locations shown.

NOTE: You must set the **timer/toast** knob as desired for the oven to begin toasting.

BAKING FUNCTION

NOTE: For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting.

1. Set **'temperature'** knob to the desired temperature.
2. Turn **'timer/toast'** knob past 10 and then to desired baking time, including preheat time. (Select **'stay on'** to bake longer than 30 minutes or to control cooking time yourself.)
3. The power indicator light comes on and remains on during the entire baking time.
4. The heating elements will cycle on and off to maintain even heat distribution.

5. Once oven has preheated, open oven door and insert food. Close oven door.

NOTE: Use a glass or ceramic baking dish placed on the slide rack.

6. If using the oven timer, there will be an audible signal once the baking cycle is complete. The oven turns off and the light goes out. If not using the oven timer, turn the oven to **O** once cooking cycle is complete.
7. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the cooked food.
8. Unplug appliance when not in use.

GRILL FUNCTION

NOTE: When grilling, preheat oven for 10 minutes.

1. Set **'temperature'** knob to **'grill'**.
2. Open oven door and using the bake pan as a drip tray, insert it under the slide rack and place food directly on slide rack/grill rack.
3. Turn **'timer/toast'** knob past 10 and then to desired grilling time, including 5-minute preheat or to **'stay on'**.

NOTE: You can cook your food 3 ways:

- Use the bake pan/drip tray placed on the slide rack.
 - Place the bake pan/drip tray under the slide rack.
 - Place the food directly on the slide rack / grill tray.
4. When finished grilling, there will be an audible beep. Turn the **'timer/toast'** selector to the **O** position. The power indicator light goes off.
 5. Using an oven mitt or pot holder, pull out slide rack together with bake pan to remove food.
 6. Unplug appliance when not in use.

KEEP WARM FUNCTION

1. Turn **'temperature'** knob to **'warm'**.
2. Turn **'timer/toast'** knob past 10 and then to desired warming time. (Select **'stay on'** to control cooking time yourself.)

NOTE: This feature is designed to keep already cooked foods warm after they have been cooked. This function should be used for short periods of time; to prevent food from drying out, cover with foil.

3. When cycle is complete, there will be an audible signal. The oven and the power indicator light will go off.
4. If not using the oven timer, turn the **'timer/toast'** selector knob to **O** once cycle is complete.
5. Unplug appliance when not in use.

CARE AND CLEANING

Important: Before cleaning any part, be sure the oven is off, unplugged, and cool.

1. Clean the glass door with a sponge, soft cloth, or nylon pad and warm, soapy water. Do not use a spray cleaner.
2. To remove the slide rack, open the door, pull the rack forward and out.
3. Wash the slide rack in soapy water or in a dishwasher. To remove stubborn spots, use a polyester or nylon pad.
4. Wash the bake pan in sudsy water. To minimize scratching, use a polyester or nylon pad.
5. Pull out crumb tray and dispose of crumbs. Wipe tray with a damp cloth and dry thoroughly before placing back into the oven.
6. Wipe the outside of the oven with a damp cloth or sponge. Dry thoroughly.
7. Do not attempt to clean the heating elements. Any food that comes into contact with the elements will burn on its own.

SEE THE SEPARATE RECIPE BOOKLET FOR SOME RECIPES TO GET YOU STARTED.

NOTES:

A series of horizontal dotted lines for taking notes.



www.russellhobbs.com.au

www.russellhobbs.co.nz