




# Russell Hobbs



instructions

**£10,000 prize draw**  
**EXTRA year guarantee**  
**FREE rewards gallery**  
[www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)  
Register online now!  
See back for details

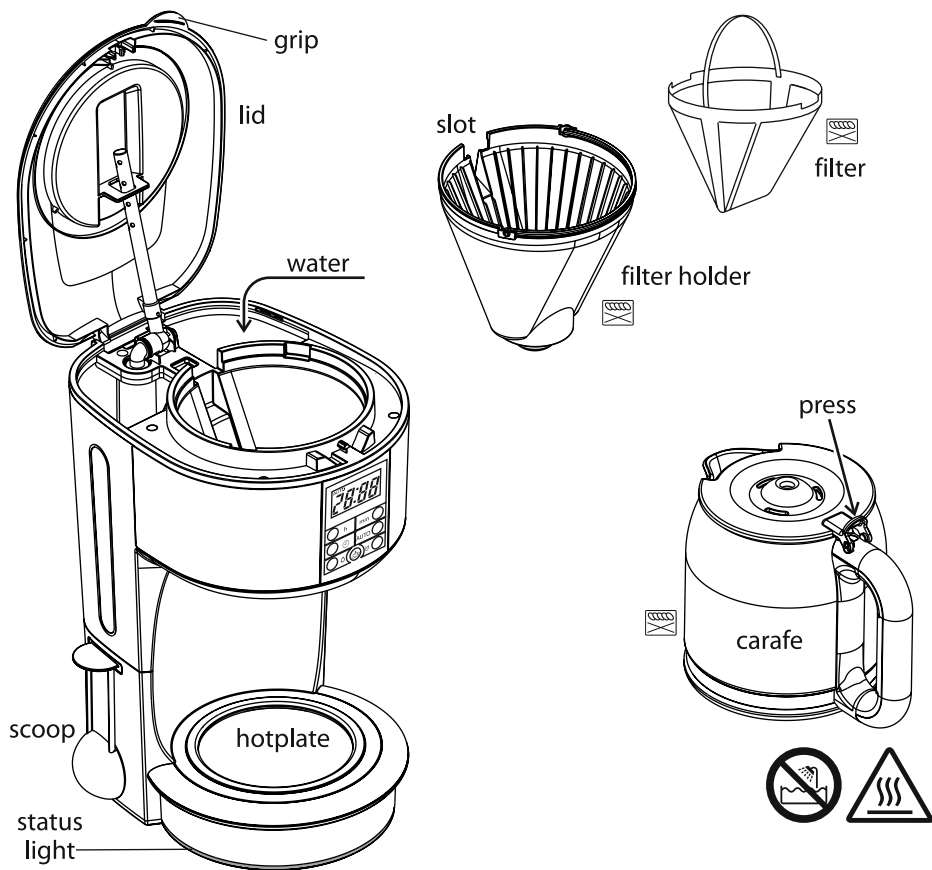

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.

**STOP IMPORTANT SAFEGUARDS**

Follow basic safety precautions, including:

1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved.

- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Keep the appliance and cable out of reach of children under 8.

 The surfaces of the appliance will get hot.

 Don't immerse the appliance in liquid.

- 2 If the cable is damaged, return the appliance, to avoid hazard.
- 3 Sit the appliance on a stable, level, heat-resistant surface.
- 4 Keep the appliance and cable away from the edges of worktops.
- 5 Don't use accessories or attachments other than those we supply.
- 6 Don't use the appliance for any purpose other than those described in these instructions.
- 7 Don't use the appliance if it's damaged or malfunctions.

### household use only

#### BEFORE USING FOR THE FIRST TIME

Fill the reservoir to the **max** mark, and run the appliance without coffee.





#### FILLING

- 1 Remove the carafe from the hotplate.
- 2 Use the grip to open the lid, and expose the reservoir.
- 3 Fill the reservoir with the exact amount of water required.
- 4 Put 1 scoop of filter-ground coffee into the filter for each cup.
- 5 Close the lid.
- 6 Replace the carafe on the hotplate.

#### SWITCH ON

- 7 Put the plug into the power socket.
- 8 The appliance will beep. 12:00 will blink on the display.

#### COFFEE NOW

- 9 Ignore the clock.
- 10 If you're making less than 5 cups of coffee, press the  button.
- 11 1-4  will show on the display.
- 12 It slows the brewing process, so your coffee will have the same strength as coffee from a full carafe.
- 13 Press the  button. The button will glow.
- 14 Shortly afterwards, coffee will start to drip into the carafe.
- 15 When it's done, the coffee maker will beep, and the hotplate will keep the carafe warm.
- 16 If you want to stop the coffee maker while it's brewing, press the  button.

#### STATUS LIGHT

- 17 The status light will change to show how fresh the coffee is.
  - red = brewing / 0-30 minutes since brewing
  - red (blinking) = 30-40 minutes since brewing

#### AUTO SHUT-OFF

- 18 About 40 minutes after brewing finishes, the appliance will shut down.
- ★ To wake the appliance, press the **min** button.
- 19 After about 30 minutes, chemical changes will affect the taste of the coffee.


#### COFFEE LATER

 
- 20 The clock will retain its settings until the coffee maker is unplugged.
- 21 It's a 24 hour clock.

22 Set the clock to the correct time.

- Use the **h** and **min** buttons to set the correct hour and minute.

23 Set the timer to the time you want to start brewing.

- Press the  button.
- Use the **h** and **min** buttons to set the correct hour and minute.

✳ If you don't press either the **h** or **m** buttons within 5 seconds, the coffee maker will revert to "normal", and the time will show. You'll have to press the  button, and start again.

24 If you're making less than 5 cups of coffee, press the  button.

25 1-4  will show on the display.

## **ACTIVATION**

26 Press the **AUTO** button.

27 **AUTO** will show on the display.

28 At the time you set, the  button will glow, and the coffee maker will start up.

29 To cancel the timer before brewing has started, press the button again.



## **REMEMBER**


30 If you forget what time you've set it to, press and hold the  button, then release it.

## **A QUICK CUP**

31 You can remove the carafe at any time. To prevent the filter holder overflowing, replace the carafe on the hotplate within about 20 seconds.

## **A STRONGER BREW**

32 If you're making 5 cups or more, you may use the 1-4  function to make the brew slightly stronger. Just press the  button once.

33 1-4  will show on the display.

## **CARE AND MAINTENANCE**


34 Unplug the appliance and let it cool.

35 Tip the contents of the filter holder into the bin.

36 Clean the outside surfaces of the appliance with a damp cloth.

37 Press the lever at the rear of the carafe lid, above the handle, to open the carafe lid.

38 Hand wash the carafe and filter holder.

 You may wash these parts in the top rack of a dishwasher.

## **SELF CLEAN**

39 To prevent scale building up, use the self clean function at least monthly in normal water areas, more often in hard water areas.

40 Ensure the kitchen is well ventilated, as heating vinegar causes an unpleasant smell.

41 This operation will take 35-45 minutes.


42 Mix 6 cups of white vinegar with 4 cups of water in the carafe.

43 Pour the mixture into the reservoir.

44 Close the lid.

45 Replace the carafe on the hotplate.

46 Put the plug into the power socket.

47 Press the  button.

48  will show on the display.

- 49 Part of the mixture will come through. The remainder will soak in the boiler for 30 minutes, then come through.
- 50 At the end of the operation, the appliance will beep, then switch itself off.
- 51 Fill the reservoir to the **max** mark, and run the appliance without coffee.
- 52 Do this 2 or 3 times, till the vinegar smell has gone.
- ✳ Products returned under guarantee with faults due to scale will be subject to a repair charge.





## ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

## SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: [support@russellhobbs.com](mailto:support@russellhobbs.com)

telephone: 0845 658 9700 (local rate number)

## GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

## ONLINE/SPARES

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products and/or spares

## REGISTER ONLINE FOR –

 £10,000 prize draw,

EXTRA year guarantee,

FREE rewards gallery

Visit [www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)

You must register within 28 days of purchase.