



Russell Hobbs



JUICEMAN

2 YEAR WARRANTY

RHJM8000AU

RHJM8000AU_IB_FA_101212

INSTRUCTIONS & WARRANTY

Spectrum Brands Australia Pty Ltd
Locked Bag 3004 Braeside
Victoria 3195 Australia
Customer Service in Australia
TollFree: 1800 623 118
Email: info@spectrumbrands.com.au
Website: www.spectrumbrands.com.au

Spectrum Brands New Zealand Ltd
PO Box 9817 Newmarket
Auckland 1149 New Zealand
Customer Service in New Zealand
TollFree: 0800 736 776
Email: service@spectrumbrands.co.nz
Website: www.spectrumbrands.co.nz

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd Warranty Against Defects



In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573;
or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials from the date of purchase (Warranty Period), for the period of:-
 - (a) Two (2) years for Russell Hobbs products (see product packaging for details)
 - (b) Two (2) years with five (5) year motor warranty for Russell Hobbs products (see product packaging for details)
 - (c) Limited Lifetime, Ten (10) years for Russell Hobbs cookware.
 - (d) One (1) year for George Foreman, iRobot, Westinghouse, Black & Decker and Spectrum Brands products.

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Ltd.

Contact us or the Supplier for further details.

Register your product online

If you live in Australia please visit: www.spectrumbrands.com.au/warranty

If you live in New Zealand Please visit: www.spectrumbrands.co.nz/warranty

Registration of your warranty is not compulsory, it gives us a record of your purchase AND entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

Any questions? Please contact Customer Service for advice.

Congratulations on the purchase of your Russell Hobbs appliance. Each unit is manufactured to ensure safety and reliability. Before using the appliance for the first time, please read the instruction booklet carefully and keep it for future reference. Pass it on if you pass on the appliance.

When using electrical appliances, basic safety precautions should always be followed.



- | | |
|---------------------------------|-------------------------------|
| 1. Small food feeder | 8. Speed control switch |
| 2. Large food feeder | 9. Base |
| 3. Feed chute | 10. Cord wrap (under base) |
| 4. Lid | 11. Anti-drip removable spout |
| 5. Stainless steel filter | 12. Open/close drip latch |
| 6. Integrated pulp container | 13. Juice jug |
| 7. Locking latches (both sides) | 14. Cleaning brush |

HOW TO USE

Remove all labels, tags and stickers attached to the body or cord.

Note: Before you use the Juiceman for the first time, disassemble the unit, see 'HOW TO DISASSEMBLE THE JUICEMAN' section; wash all parts as instructed in the 'CARE AND CLEANING' section.

Caution: Do not rinse or immerse base in water or any other liquid.

- Place the base on a dry, level counter to prepare and assemble, following instructions in the 'ASSEMBLING THE JUICEMAN' section.
- Once assembled place the Juiceman on a dry, level space allowing at least 20mm air space on all sides to provide proper ventilation for the motor.

HOW TO DISASSEMBLE THE JUICEMAN

- Rotate the small fruit and vegetable feeder counter-clockwise to unlock it from the large fruit and vegetable feeder and withdraw it from the juicer.
- Lift the large fruit and vegetable feeder upwards to remove it from the juicer.
- Pull out then upwards at the bottom of each locking latch to disengage the latches from the tabs on the lid.
- Lift the lid off the juicer.
- To remove the stainless steel filter, grasp the filter at two sides of the rim and pull upwards.

Caution: The stainless steel filter cutting teeth are very sharp. Handle it carefully.

- Turn the pulp container upside-down.
- Remove the anti-drip spout by grasping the centre of the spout and pulling up to release it from the 4 latches (see A).
- All removable parts are now disassembled (wash all parts before first time use as instructed in the 'CARE AND CLEANING' section).





ASSEMBLING THE JUICEMAN

- Turn the pulp container upside-down.
- Insert the removable anti-drip spout onto the pulp container by aligning the 4 latches and pushing down on the centre until it snaps into place (see B).
- Place integrated pulp container on the base with the juice spout seated in the cavity provided on the base.
- Insert the stainless steel filter in the centre of the integrated pulp container and press down until it snaps into place.
- Place the lid on top of the integrated pulp container, making sure that the tabs on the lid are aligned with the locking latches on the base.
- Hook both locking latches over the tabs on the lid and push the bottom end of both latches towards the base until they snap into place.
- Place the large fruit and vegetable feeder into the feed chute, matching the indentations on the feeder to the projections on the feed chute.
- Insert the small fruit and vegetable feeder into the feed chute (see 'USING THE SMALL AND LARGE FOOD FEEDERS' section).



Note: The appliance will not operate until the locking latches are locked.

USING THE ANTI-DRIP SPOUT

- The Open/Close latch should be in the Closed () position before and after each juicing cycle to avoid dripping.
- The latch should be in the Open () position during juicing.
- See '**CARE AND CLEANING**' for further instruction.

PREPARATION, PURCHASING AND STORING INGREDIENTS

How to prepare fruits and vegetables for juicing;

- Always use fresh fully ripened fruits and vegetables.
- When purchasing, consider selecting fruits and vegetables in season for optimum freshness and flavour.
- Choose fruits that are plump, tender and have bright colour. Fruits should be heavy for their size without bruises, cuts or blemishes.
- To ripen fruit, place in a small clean paper bag. Close the bag loosely and let it stand at room temperature, (to speed ripening, add a ripe apple or banana to the bag.)
- Once ripened, store in the refrigerator for a day or 2 until ready to use.
- Store perishable vegetables in the refrigerator until ready to use.

PREPARING FRUITS AND VEGETABLES FOR THE JUICEMAN

- Wash fruits and vegetables thoroughly just before using in the Juiceman.
- If desired, remove the skin. The skin may be left on all produce with the exception of all citrus fruits, including oranges, grapefruit, lemons, limes, tangerines.

Note: *The oil in the skin of these fruits tastes bitter and is difficult to digest.*

Hint: *Although the skin may be left on melons and pineapple, you may choose to remove them to maximize the fruit flavour in your finished drink.*

- All pits and large seeds should be removed from fruits, including apricots, cherries, nectarines, mangos, peaches, plums and melons.
- Trim any bruised or discoloured sections of fruits and vegetables.
- The design of the feed chute accommodates larger produce. It will easily accommodate most whole fruits and vegetables, such as, apples, beetroots, carrots and celery.
- If necessary, cut larger pieces of fruit and vegetables into smaller pieces before inserting into the feed chute.

USING THE JUICEMAN

Note: *To begin, assemble the fruits and or vegetables to be used on the counter or in a bowl next to the Juiceman, following tips in 'PREPARATION, PURCHASING AND STORING INGREDIENTS' section.*


Caution: *The integrated pulp container holds about 3½ cups of pulp. Do not allow the integrated pulp container to overfill. This may cause the appliance to stall.*

- Plug appliance into a standard electrical outlet. Press the speed control switch to the low setting (1) and allow it to run 10 seconds before placing any food into the feed chute.
- Place food in the feed chute and press lightly with the fruit and vegetable feeder.
- Use the feeder as a guide to gently direct the produce through the feed chute.

Note: To get the most juice from the fruits and vegetables, do not force or rush the food through the appliance.

- When the pulp container or juice jug is almost full (the pulp container holds about 3½ cups of pulp and the juice jug holds about 4 cups of juice) turn off (O).
- Allow the motor to come to a complete stop before emptying either part.
- Follow the instructions in '**HOW TO DISASSEMBLE THE JUICEMAN**' to remove the pulp container, then follow instructions in '**ASSEMBLING THE JUICEMAN**' section.

Caution: The stainless steel filter cutting teeth are very sharp. Handle the filter carefully.

- When juicing is complete, the anti-drip spout should be switched to closed () position.
- Turn off and unplug the juicer from the power outlet.

Note: Never place fingers or hands into the feed chute.

USING THE SMALL AND LARGE FRUIT & VEGETABLE FEEDERS

Note: The fruit and vegetable feeder has 2 parts; the smaller clear inner section locks into the larger outer section.

- To remove the small food feeder, hold the large food feeder with one hand and twist counter clockwise until the lock of the inner section is disengaged; lift the small food feeder straight up.
- Place the large fruit and vegetable feeder into the feed chute, matching the indentations on the food feeder to the projections on the feed chute.

Note: Use the smaller opening for small fruits and vegetables. Use the small fruit and vegetable feeder to help guide the fruits and vegetables through the opening in the large fruit and vegetable feeder.

- When using larger pieces of fruits and vegetables, place the small fruit and vegetable feeder into the large food feeder and use the assembled piece to help guide the larger pieces of fruit and vegetable through the feed chute. Match the notches to the opening.
- The clear centre will drop into the slot; turn the top clockwise until the small feeder is locked into place.

JUICE EXTRACTOR TIPS

- Do not put food into the extractor before turning the appliance on.
- Let the appliance run for at least 10 seconds before placing any food into the feed chute.
- Do not process bananas, avocados or coconut. They have no juice and will clog the appliance.
- Be sure to remove all pips and large seeds from fruits.
- For maximum nutritional benefits, drink your juice immediately.
- Do not operate the juicer for longer than 6 minutes in one session and allow 2 minutes between sessions for the motor cool.

FOR OPTIMUM JUICING

- Avoid excessive build up of pulp on the underside of the lid.
- Remove rind of melons; because they are so thick, they water down drinks.
- Refrigerate washed ripe fruits and vegetables until they are ready to use.

USES FOR THE PULP

- The pulp from the fruits and vegetables is high in nutritional value. Use it to add fibre and flavour to muffins and quick breads.
- Use it to thicken soups, casseroles and sauces.
- Use fruit pulp to add nutrition and flavour to desserts, such as, puddings and cakes. Be sure to use it the same day you extract the juice.
- Pulp is also food for your garden. You can use it as compost.

CARE AND CLEANING

Caution: Always unplug your juice extractor from the outlet before cleaning.

Cleaning

- Disassemble the appliance following the instructions in the **'HOW TO DISASSEMBLE THE JUICEMAN'** section.
- Using a sponge or damp cloth, clean the base, feet and underside of the appliance.

Note: If necessary, you may use a damp toothbrush or cloth to clean juice from the inside the motor shaft (on top of motor base).


Caution: Do not immerse the base in water or spray with water. Clean only by wiping with a damp sponge, cloth or paper towel.

- All parts – except for the base are dishwasher safe (top-rack only), or you may wash in warm, soapy water, using any mild liquid dishwashing detergent.

Do not use any products containing ammonia scouring powders, or alkaline cleaning agents as these can dull, scratch or mark the surface. Use the cleaning brush provided to remove pulp left on any of the removable parts. Do not use metal brushes or pads.

Note: If necessary the anti-drip spout can be removed for cleaning.

- Remove the anti-drip spout while in the open (☑) position.
- Turn the pulp container upside-down.
- Remove spout by grasping the centre of the spout and pulling up to release from the 4 latches (see A).
- To clean the fruit and vegetable feeder, twist to unlock and remove the small food feeder from the large food feeder.
- Clean with other removable parts; once parts are dry, put back together.
- To clean the filter, use the cleaning brush provided to make sure the tiny holes in the mesh filter are not clogged.
- Hold the filter under a running tap while brushing the mesh filter screen from both the inside and outside of the filter mesh with the cleaning brush.

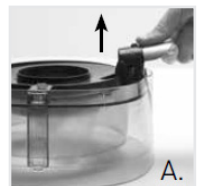

Removing tough stains

- Due to powerful staining properties of carotenoids found in many vegetables, particularly carrots, we suggest soaking any stained parts overnight in one of the following solutions:
- Dishwashing liquid in enough warm water to cover juice extractor parts.
- 1 part warm water to 1 part cider vinegar.
- 1 small box of baking soda in enough warm water to cover juicer parts.

Caution: Never use ammonia or abrasive cleansers.

- After soaking overnight, lightly scrub with soft bristle brush and liquid detergent.

STORAGE

Store the Juiceman in a clean, dry place. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters juicer, as this could cause the cord to fray and break.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The Juiceman will not start when the speed switch is pressed.	The Juiceman may not be assembled correctly.	Check the assembly directions found on page 5.
The motor of the Juiceman seems to be struggling.	<ul style="list-style-type: none"> • Pulp container may be full. • Pulp may have collected under the lid. • The speed selected may not be correct for the type of produce you are juicing. 	<ul style="list-style-type: none"> • Turn the Juiceman off and empty the pulp container. Remember, the pulp container holds about 3½ cups of pulp; do not allow to get too full. • Turn off and unplug. <p>Follow the directions for disassembly to take the lid off. Wash lid thoroughly and return to appliance following the assembly directions</p> <ul style="list-style-type: none"> • Hard fruits and vegetables require speed 2; softer fruits and vegetables use speed 1.
The Juiceman has stopped producing juice.	<ul style="list-style-type: none"> • The juice spout may be in the closed position. • The integrated pulp container or the stainless steel filter may be blocked. 	<ul style="list-style-type: none"> • Check to see if the spout is closed (🔒) or open (🔓). • Turn the Juiceman off and unplug. Follow the directions for disassembly. Wash all parts thoroughly and return to appliance following the assembly directions.
The Juiceman is not producing as much juice as expected.	High fibre fruits and vegetables may be clogging the stainless steel filter.	Turn off and unplug the Juiceman. Follow the directions for disassembly. Wash all parts thoroughly and return to appliance following the assembly directions.
The Juiceman stops running	Motor may be overheating	Unplug the Juiceman and allow it to cool approximately 5 minutes before continuing.

IMPORTANT SAFEGUARDS

1. To protect against electric shock do not immerse cord, plug or body of unit in water or liquid of any sort.
2. Do not use outdoors or in damp or moist areas.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. This appliance is NOT a toy. Young children should be supervised to ensure they do NOT play with the appliance.
6. Always turn off and unplug from the wall power outlet when not in use, before fitting or removing parts, and before cleaning the appliance.
7. To disconnect, ensure the appliance switch is set to off, turn off the wall power outlet, then grasp and pull the plug from the wall outlet. Never pull by the cord.
8. Do not operate this appliance with a damaged cord/plug or after the appliance has been dropped, damaged or has malfunctioned in any manner. Contact customer service for replacement, examination, repair or adjustment.
9. There are no user serviceable parts. If the power cord or appliance is damaged, it must be repaired or replaced by the manufacturer or a suitably qualified person in order to avoid hazard.
10. The use of attachments/accessories not recommended by the appliance manufacturer may cause injuries or damage to the appliance.
11. Do not use on an inclined plane or unstable surface.
12. Keep the appliance and the power cord away from the edge of tables or countertops and out of reach of children and infirm persons.
13. Keep hands and utensils away from moving cutter/strainer disc while juicing foods to prevent the possibility of severe personal injury or damage to the appliance.
14. Care must be taken when handling any accessories with sharp edges.
15. NEVER place hands or utensils into the juicer opening or near any moving parts while the appliance is operating.
16. Do not attempt to defeat any safety interlock mechanisms.
17. Do not use the appliance if the stainless steel filter is damaged.
18. Do not unclamp the safety locking latches during operation.
19. Always clean the appliance after use.
20. Follow the instructions when cleaning this appliance.
21. Do not place on or near any heat sources.
22. Do not leave the appliance unattended when in use.
23. Do not use appliance for other than its intended purpose.
24. This appliance is not a toy. Children should be supervised to ensure they do not play with the appliance.
25. This appliance is not intended to be operated by means of an external timer or separate remote control system.
26. For added safety, electrical appliances should be connected to a power outlet that is protected by a residual current device (RCD), also often referred to as a 'Safety Switch'. Your switchboard may already incorporate an RCD. If unsure, call an electrician for verification and fitting if necessary.
27. To prevent possible damage to the appliance do not use harsh abrasive or alkaline cleaning agents.

**SAVE THESE INSTRUCTIONS
THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY**

NOTES



**Russell
Hobbs**



RECIPES

JUICEMAN

RHJM8000AU

INSTRUCTIONS & WARRANTY

For more recipes:



food
home living

Become a
member

www.foodandhomeliving.com.au




Scan this code to learn more. Download a QR Reader App to scan the code

The complex block is a rounded rectangular button with a grey background. On the left is a large QR code. To its right, the text 'food' is in a bold, lowercase sans-serif font, with 'home living' in a smaller, lowercase serif font below it. A vertical line separates this from the text 'Become a member' in a sans-serif font. Below this text is a dark grey bar containing the website URL 'www.foodandhomeliving.com.au' in white. At the bottom left of the button is a small icon of a smartphone with a QR code on its screen. To the right of this icon is the text 'Scan this code to learn more. Download a QR Reader App to scan the code'. At the top right of the button is a small icon of a mouse cursor pointing at a circular button.

RUSSELL HOBBS and logo are Trade Marks of Spectrum Brands, Inc., or one of its subsidiaries.
©2013 Spectrum Brands, Inc.

Recipes are to be used in conjunction with the Juiceman by Russell Hobbs. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior permission of the copyright owner.

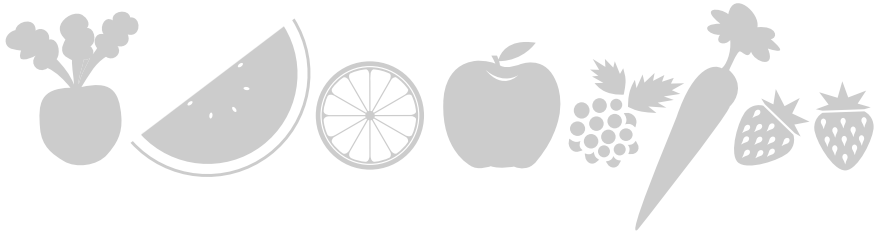

JUICE FOR LIFE!

Juicing is a fabulous way to provide yourself with a high level of quality nutrition; a kind of gift to your body.

Basic benefits of juicing:


1. Fresh juice requires minimal digestion, enabling fast absorption of nutritional goodness from fruit and vegetables
2. When juicing, one tends to use more fruits and vegetables than you would normally eat. As a result, you are drinking a densely packed amount of vitamins, minerals and other plant-based nutrients – giving your system a great boost
3. Fresh juice cleanses the liver. There are many fruits and vegetables that are good for the liver, packed with antioxidants which assist in cellular regeneration and cleanse toxins from your system

Here are some recommended juice blend recipes to get you started. Be sure to juice ingredients in order as written here to obtain maximum nutrition from all fruits and vegetables...




Skin Complexion Boost

- 1 cup blueberries
- 1 cup raspberries
- 1 cup blackberries
- 1 cup strawberries
- 2 apples

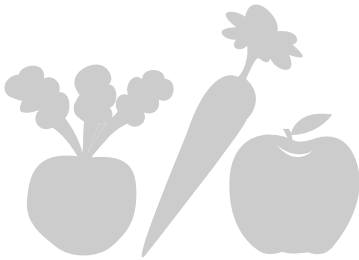

Body Detox Juice

- 2 Beetroot, washed & trimmed of root / stalks
- 1 Carrot
- 6 Sticks of Celery
- 2 Apples
- 1 Pear

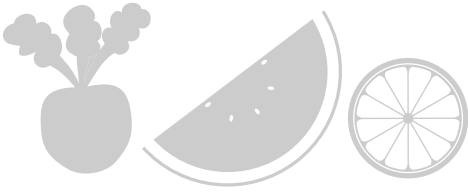


Hangover Remedy Juice

¼ cantaloupe, peeled & sliced

¼ watermelon, peeled & sliced

2 beetroot, washed & trimmed of root / stalks

2 oranges, peeled & quartered

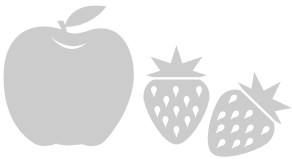

Breakfast Central Juice

3 apples, quartered

1 ½ cups blueberries (fresh or frozen)

½ cup raspberries (fresh or frozen)

4 whole strawberries

2 kiwi fruit